

2. CONVENTIONAL TOOLS

HANDLE WRENCHES




CAUTION HANDLE WRENCHES

- DO NOT EXTEND A WRENCH BY CONNECTING A PIPE, ETC.
- FIT THE BOLT OR NUT COMPLETELY INTO THE DEEP PART OF THE SOCKET.
- DO NOT USE A WRENCH AS A SUBSTITUTE FOR A HAMMER.
- DO NOT APPLY IMPACT BY HITTING WITH A HAMMER, ETC.


T SHAPE WRENCH

No.	S (Hexagonal)	D	d	ℓ	L	▽g	☒
TH- 8	8	12	8	200	255	300	10
- 9	9	14	8	200	255	300	10
-10	10	14	9	200	255	300	10
-11	11	16	9	200	255	330	10
-12	12	17	10	250	255	430	10
-13	13	19	10	250	255	440	10
-14	14	20	11	250	255	440	10
-17	17	24	12	300	305	540	10
-19	19	29	14	300	305	680	10
-21	21	31	14	300	305	780	10
-22	22	32	15	300	310	800	10
-23	23	33	15	300	310	880	10
-24	24	35	15	300	310	920	10
-26	26	37	15	300	310	940	10
-27	27	39	15	300	310	960	10

• Size marked on the top of the handle for easy recognition.



● T SHAPE WRENCH

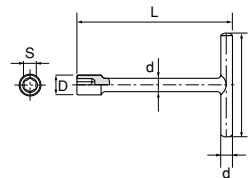


T SHAPE WRENCH WITH SHORT HANDLE

No.	S (Hexagonal)	D	d	ℓ	L	▽g	☒
TH- 8N	8	12	8	130	250	300	1
-10N	10	14	9	130	250	300	1
-12N	12	17	10	130	250	430	1

• Short handle for quick turning.

● T SHAPE WRENCH WITH SHORT HANDLE

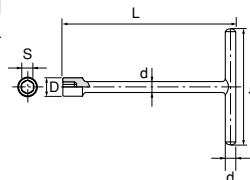


T SHAPE HANDLE


No.	ℓ	L	▽g	☒
TH20	200	250	275	10

• With 3/8"sq. dr. for use on Sockets, Hexagon Wrenches, etc.

⚠ CAUTION • INSERT THE DRIVE SQUARE DEEPLY TO THE END.

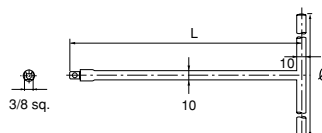


● 3/8"sq. T SHAPE WRENCH

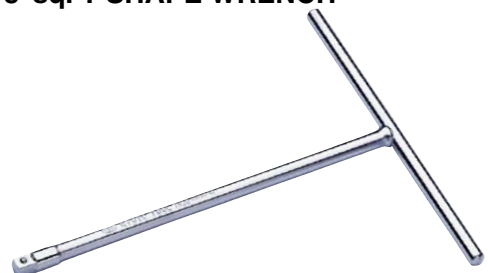

*Please check the merchandise inventory for a product that is marked by ⚠ before placing an order.


● 3/8"sq. HANDLE

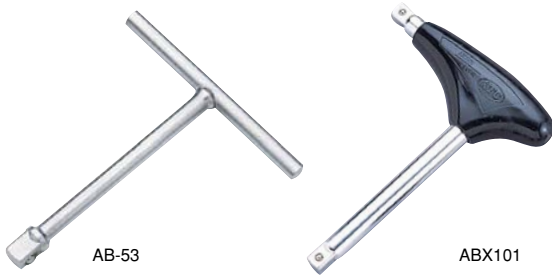

HANDLE							
No.	H	W	ℓ	L	▼g	📦	
ABX101	135	28	—	105	250	10	
AB-53	—	—	100	115	90	1	

• This can be used for sockets and hexagon wrenches due to the 3/8"sq drive.

⚠ CAUTION • INSERT THE DRIVE SQUARE DEEPLY TO THE END.

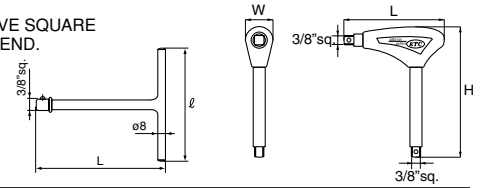


● 3/8"sq. EXCHANGEABLE T SHAPE WRENCH SET




EXCHANGEABLE T SHAPE WRENCH SET

No. BTH204	▼g 595	📦 1
T Shape Wrench	8, 10, 12	
Handle	ø10X220	

• Can be used as T Shape Wrench with removable handle.
 • Top square drive for using with 3/8"sq. dr. ratchet handle or torque wrench.
 • Removable handle for easy storing.

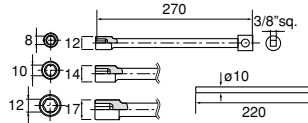


● FLEX T SHAPE WRENCH (Socket is magnetised)

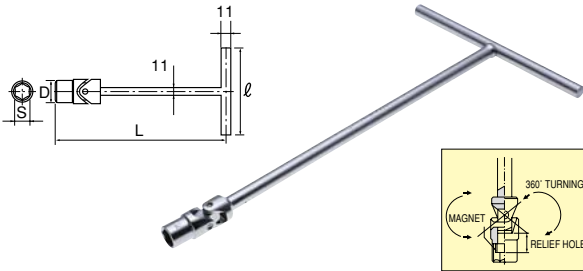


FLEX T SHAPE WRENCH

No.	S (Hexagonal)	D	ℓ	L	▼g	📦
THF2-10	10	15	180	330	400	10
-12	12	17	180	330	405	10
-13	13	19	180	330	410	10
-14	14	20	180	335	410	10
-17	17	24	180	335	430	10

⚠ CAUTION • DO NOT APPLY EXCESSIVE POWER ON THE JOINT PART.

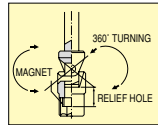


● FLEX T SHAPE WRENCH (LONG) (Socket is magnetised)

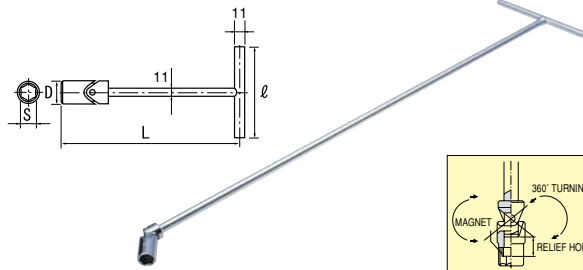


FLEX T SHAPE WRENCH (LONG)

No.	S (Hexagonal)	D	ℓ	L	▼g	📦
THF2-10L	10	15	180	700	680	10
-12L	12	17	180	700	680	10
-13L	13	19	180	700	690	10
-14L	14	20	180	705	690	10
-17L	17	24	180	705	700	10

⚠ CAUTION • DO NOT APPLY EXCESSIVE POWER ON THE JOINT PART.

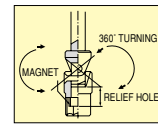

● FLEX T SHAPE WRENCH (LONG)

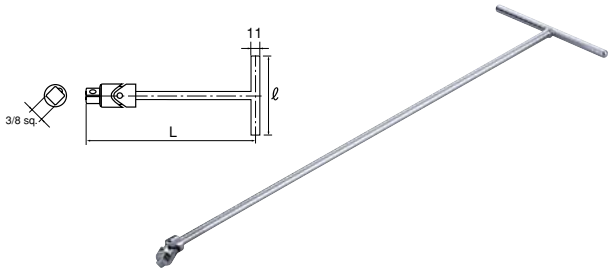


FLEX T SHAPE WRENCH (LONG)

No.	EDGE	ℓ	L	▼g	📦
THF20-700	3/8"sq.	180	705	700	10

⚠ CAUTION • DO NOT APPLY EXCESSIVE POWER ON THE JOINT PART.
 • INSERT THE DRIVE SQUARE DEEPLY TO THE END.

● 1/2"sq. SPEEDING CROSS WRENCH

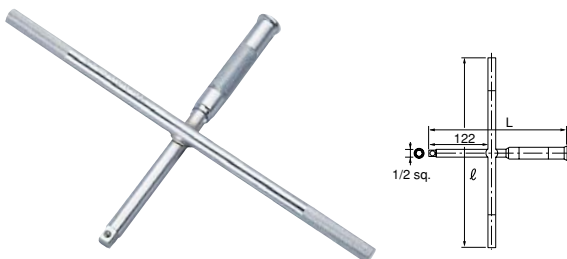

SPEEDING CROSS WRENCH

No.	ℓ	L	▼kg	📦
XH30	400	285	1.5	5


• For quick turning.

⚠ CAUTION • INSERT THE DRIVE SQUARE DEEPLY TO THE END.

CROSS RIM WRENCH

No.	S ₁ ×S ₂ ×S ₃ ×S ₄ (Hexagonal)	D ₁ ×D ₂ ×D ₃ ×D ₄	L	▼kg	☒
XH-10-17	10×12×14×17	16×18×20×25	300	1.3	10
-14-21	14×17×19×21	20×25×29×31	400	1.3	10
-17-23	17×19×21×23	25×29×31×33	400	1.5	10
-19-26	19×21×23×26	29×31×33×37	400	1.5	10
-19-27	19×22×24×27	29×32×35×39	400	1.6	10


● **CROSS RIM WRENCH**

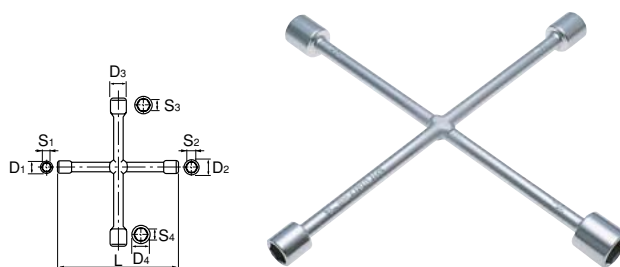

TIRE WRENCH

No.	S (Hexagonal)	D	L	ℓ	▼g	☒
OH-17	17	25	250	80	410	10
-19	19	28	280	90	460	10
-21	21	31	280	110	660	10
-23	23	33	300	125	720	10
-26	26	37	300	155	740	10

● **TIRE WRENCH**

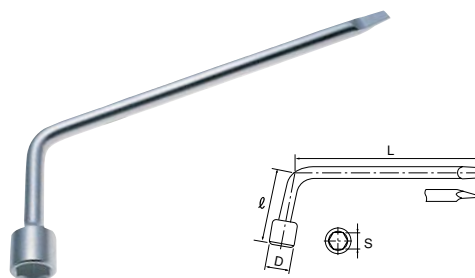

HUB NUT WRENCH

No.	S1 (sq.) × S2 (Hex)	L	A	▼kg	☒
WH-17×32	17×32	330	25	3.8	1
-17×35	17×35	330	25	4.0	1
-19×41	19×41	435	25	4.3	1
-20×38	20×38	440	25	4.3	1
-21×38	21×38	440	25	4.3	1
-21×41	21×41	440	25	4.4	1

● **HUB NUT WRENCH**



• With handle for turning.

⚠ **CAUTION** • USE THE HANDLE FOR HUB NUT WRENCHES.

HUB NUT WRENCH BAR

No.	L	Dia. of Bar	▼kg	☒
WHL-L	600	ø25	2.3	1

● **HUB NUT WRENCH BAR**

• Handle for Hub Nut Wrench.





HUB NUT WRENCH FOR LOW FLOOR VAN

No.	S1 (Hex) × S2 (Hex)	L	A	▼kg	☒
WH-21×23	21×23	220	16	1.0	1
-22×26	22×26	220	16	1.5	1
-21×27	21×27	220	16	1.5	1

● **HUB NUT WRENCH FOR LOW FLOOR VAN**

- With handle for turning.
- Hub nut wrench for double tires of low-floor van.
- Double Hexagon ends.

⚠ **CAUTION** • USE THE HANDLE FOR HUB NUT WRENCH FOR LOW FLOOR VANS.

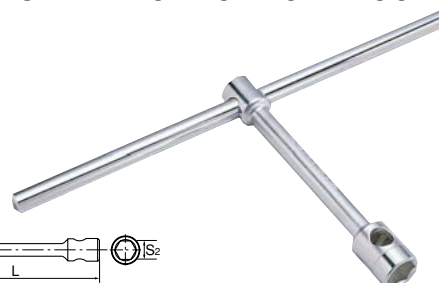

HUB NUT WRENCH BAR FOR LOW FLOOR VAN

No	L	Dia. of Bar	▼kg	☒
WHL-300	300	ø16	0.5	1

● **HANDLE FOR HUB NUT WRENCH FOR LOW FLOOR VAN**

• Handle for Hub Nut Wrench. for Low Floor Van.

